


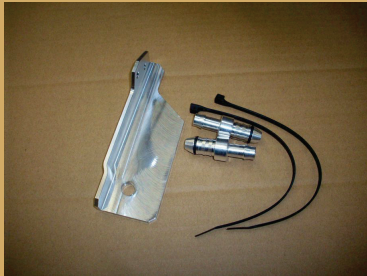




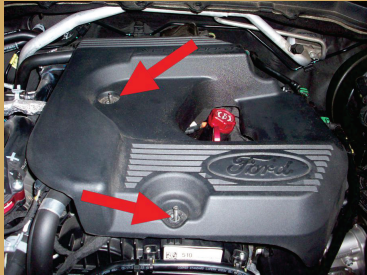

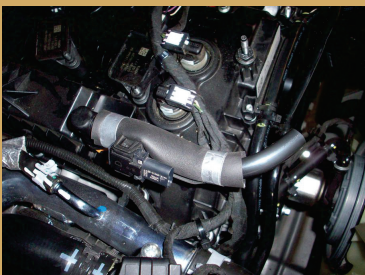



RANGER

CATCH CAN STAGE 1

TOOLS REQUIRED

M10 socket wrench
M13 socket wrench
4 MM allen wrench
T-30 Tox
Heat gun

MATERIALS REQUIRED

<p>1 When lifting the car always use stands to secure the car.</p>	<p>2 Prepare Boomba Racing Catch Can Stage 1 installation kit.</p>	<p>3 Install the mounting bracket.</p>	<p>4 Remove the air filter snorkel.</p>
			
<p>5 Remove the radiator mounting bolt.</p>	<p>6 Install the Catch Can.</p>	<p>7 Remove the engine cover.</p>	<p>8 Disconnect the vent line from the intake.</p>
			
<p>9 Cut the vent line 1" after the bend. Strip the foam insulation.</p>	<p>10 Heat up the exposed vent line and press in the adaptor fitting.</p>	<p>11 Connect the vacuum hose.</p>	<p>12 Cut the vent line 3" from the end. Strip the foam insulation.</p>
			

13

Heat up the exposed vent line and press in the adaptor fitting.



14

Connect the vacuum hose.



15

Connect the vent lines to the Catch Can. Line from the valve cover to IN. Line from the intake to OUT.



16

Dress up the vent lines with zip ties. Reinstall the engine cover and the air filter snorkel.

