
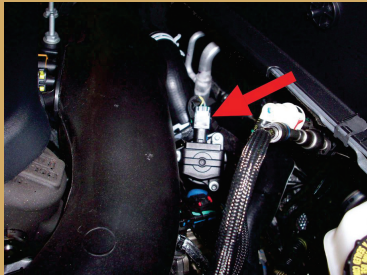


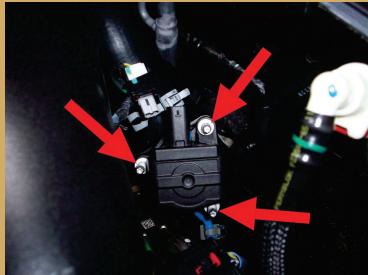

BRONCO SPORT BLOW OFF ADAPTOR

TOOLS REQUIRED

E5 socket wrench
5 MM allen wrench

MATERIALS REQUIRED

1	Disconnect the wire harness.	2	Remove the mounting screws.	3	Prepare Boomba Racing BOV adaptor.	4	Clean up the mounting surface.
							
5	Install the BOV adaptor, between the factory bypass valve and the charge pipe. Secure the blow off valve with the provided screws.	6	Reconnect the wire harness.				
