


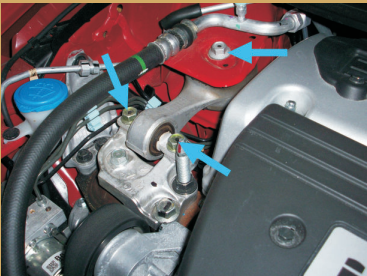

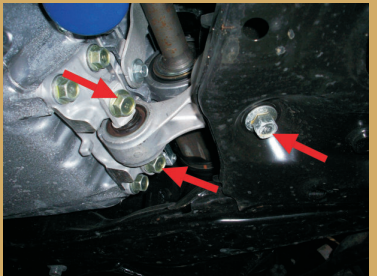



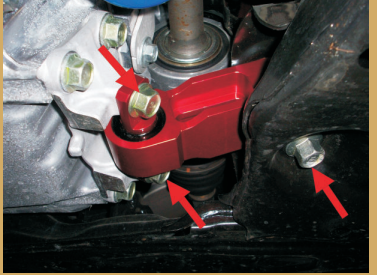
# CIVIC SI 12+ MOTOR MOUNTS INSTALLATION MANUAL

## TOOLS REQUIRED

Set of car stands  
M17 socket wrench  
M19 socket wrench  
M17 box wrench

## MATERIALS REQUIRED

None

<p><b>1</b> When lifting the car always use stands to secure the car.</p>	<p><b>2</b> Remove top mount bolts.</p>	<p><b>3</b> Remove the top mount.</p>	<p><b>4</b> Remove rear mount bolts.</p>
			
<p><b>5</b> Push the engine toward the front of the car and slide the rear mount down and out.</p>	<p><b>6</b> Get the Boomba Motor Mounts ready.</p>	<p><b>7</b> Insert the rear mount.</p>	<p><b>8</b> Line up mounting holes and insert mounting bolts. Do not tighten bolts yet.</p>
			
<p><b>9</b> Insert the top mount. Line up and insert the rear bolt.</p>	<p><b>10</b> Line up and insert front bolts. Tighten all top mounting bolts.</p>	<p><b>11</b> Tighten all bottom mounting bolts.</p>	
