




boomba racing

'20+ FORD EXPLORER ST 3.0L ECOBOOST BOV ADAPTER

INSTALLATION GUIDE



Remove the OEM filter and airbox in order to access the diverter valve underneath.

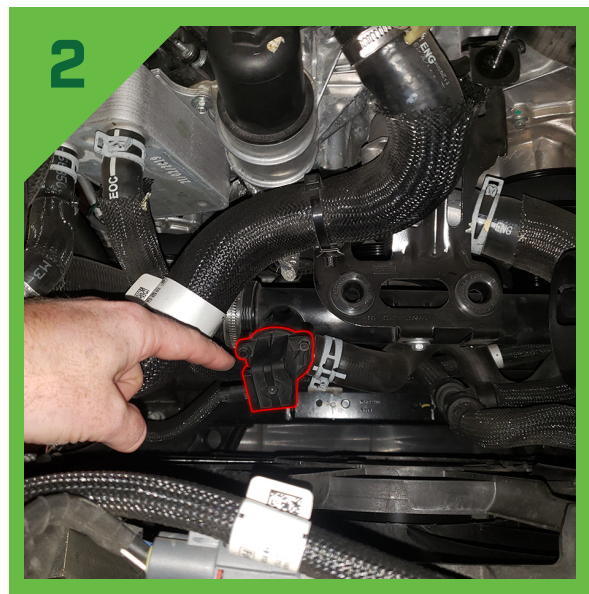

Locate the OEM diverter valve on the charge pipe.
Remove the diverter valve and unplug the wiring harness.



Install the Boomba BOV adapter between the charge pipe & the diverter valve using the provided hardware.
Reconnect the wiring harness.

