

ELANTRA GT N

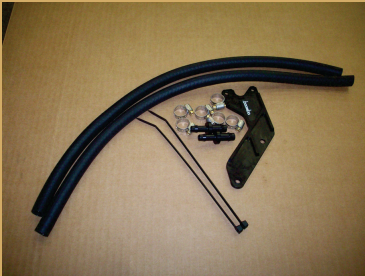


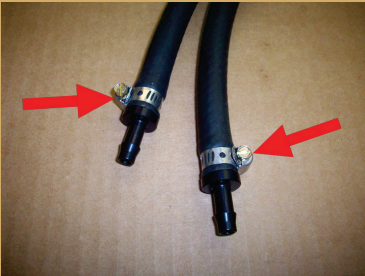

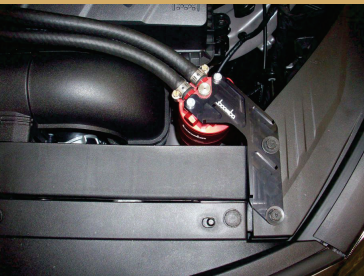
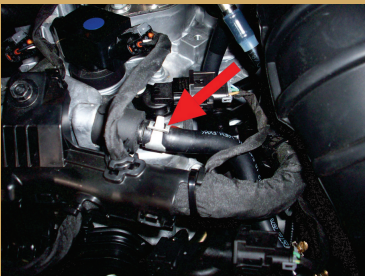

CATCH CAN STAGE 2

TOOLS REQUIRED

Pliers
M10 socket wrench
4 mm Allen wrench
Flat screw driver

MATERIALS REQUIRED

None

1	Prepare Elantra GT N Stage 2 mounting kit.	2	Secure the mounting bracket to the Catch Can	3	Connect the vent hoses to the Catch Can and secure them with the included clamps.	4	Install the hose fittings the vent hoses and secure them with the included clamps.
							
5	Remove the engine cover.	6	Mount the Catch Can beside the front driver side headlight using the existing bolts.	7	Disconnect the vent line from the valve cover.	8	Remove the foam insulation from the factory vent line.
							
9	Cut the factory vent line approximately 5.5" (140 mm) from the top end.	10	Connect the vent hoses. Connect the vent line from the valve cover to the "IN" port. Connect the vent line from the intake manifold to the "OUT" port.	11	Reconnect the vent line to the valve cover.	12	Use the zip ties to dress up the vent hoses. Install the engine cover.
