

FORD FIESTA ST


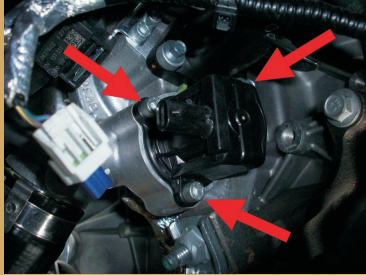
BLOW OFF VALVE ADAPTOR

TOOLS REQUIRED

Set of car stands
M5 long allen wrench

MATERIALS REQUIRED

None

1 When lifting the car always use stands to secure the car.	2 Remove the right front wheel.	3 Disconnect the blow of valve wire harness.	4 Remove the factory blow of valve.
			
5 Wipe out oil residue from the bottom of the turbo housing.	6 Boomba Blow Off Valve Adaptor ready for installation.	7 Install the Boomba Blow Off Valve Adaptor with provided screws. Connect the wire harness.	8 Reinstall the right front wheel.
		