

FORD FOCUS RS MOTOR MOUNTS INSTALLATION MANUAL

TOOLS REQUIRED

Set of car stands	M15 box wrench
T30 Torx bit	M19 box wrench
M8 socket wrench	Flat screw driver
M15 socket wrench	


MATERIALS REQUIRED

None


1 When lifting the car always use stands to secure the car.




2 Remove the splash pan.

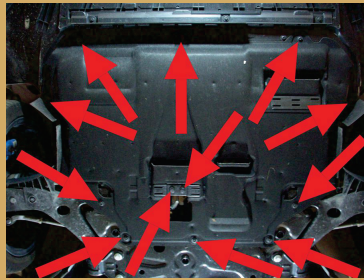


3 Remove the motor mount bolts.

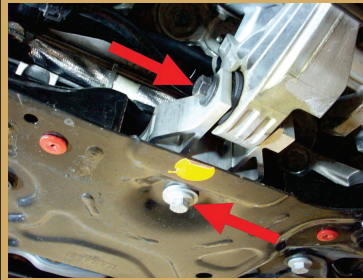


4 Remove the hose clip.

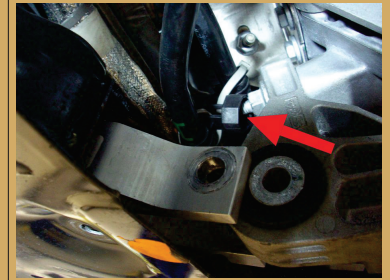


5 Slide the hose clip to the side.

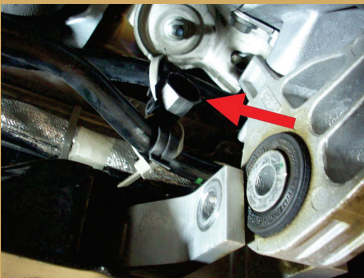

6 Remove the motor mount's back bolt.

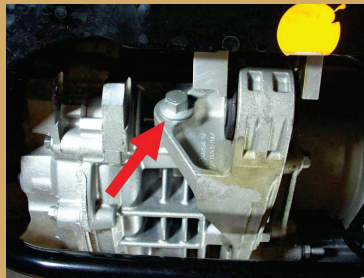

7 Remove the motor mount's bolts.

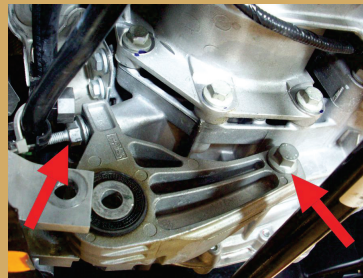


8 Boomba Racing Motor Mounts ready for installation.




9 Insert the Boomba motor mount in the frame.



10 Install the Boomba wishbone mount. Hand tighten the mounting bolts.

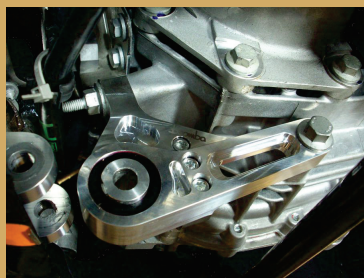

11 Install and tighten the wishbone rear bolt. Tighten the remaining wishbone bolts.

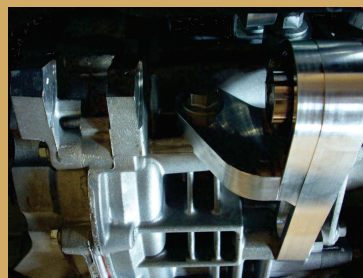

12 Tighten the motor mount bolts. Install the jam nut.



13

Install the hose clip.



14

Reinstall the splash pan.

