

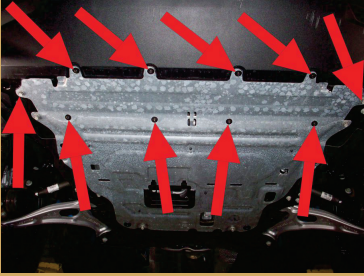
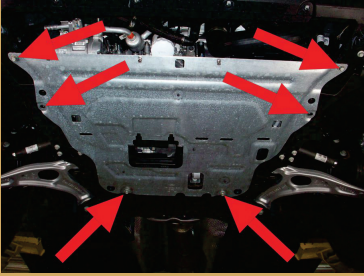
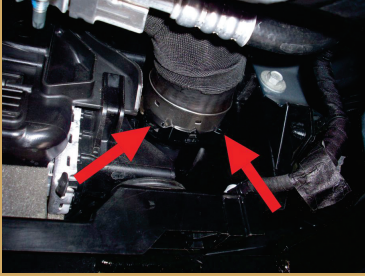

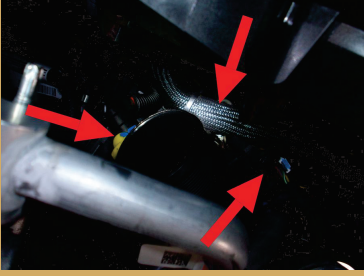

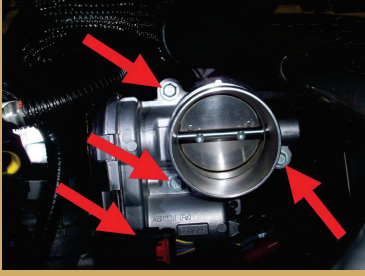


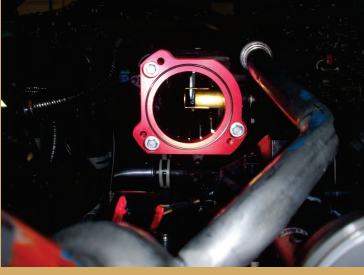


FORD MAVERICK THROTTLE BODY SPACER

TOOLS REQUIRED

M7 sockets
M8 sockets
M13 sockets
M5 allen wrench
T30 Torx
Flat screwdriver

MATERIALS REQUIRED

None

1	Remove the front skid plate section.	2	Remove the skid plate.	3	Spread apart spring clips and disconnect the charge pipe from the intercooler.	4	Remove the charge pipe.
							
5	Disconnect the vent line and the electrical connector. Move the vent line to the side.	6	Loosen the throttle body hose clamp. Remove the throttle body adaptor.	7	Disconnect the throttle body harness. Remove the throttle body.	8	Shorten the OEM throttle body screws to 1.325" (33.6 mm) long.
							
9	Prepare the Boomba Racing throttle body spacer for installation.	10	Secure the throttle body spacer to the intake manifold with the shortened OEM screws.	11	Secure the throttle body to the spacer with provided bolts. Reconnect the wire harness.	12	Reinstall the throttle body adaptor. Reconnect the vent line and the wire connector.
							

13	Secure the vent line to the bracket.	14	Reinstall the charge pipe.	15	Reinstall the skid plates.
