


b

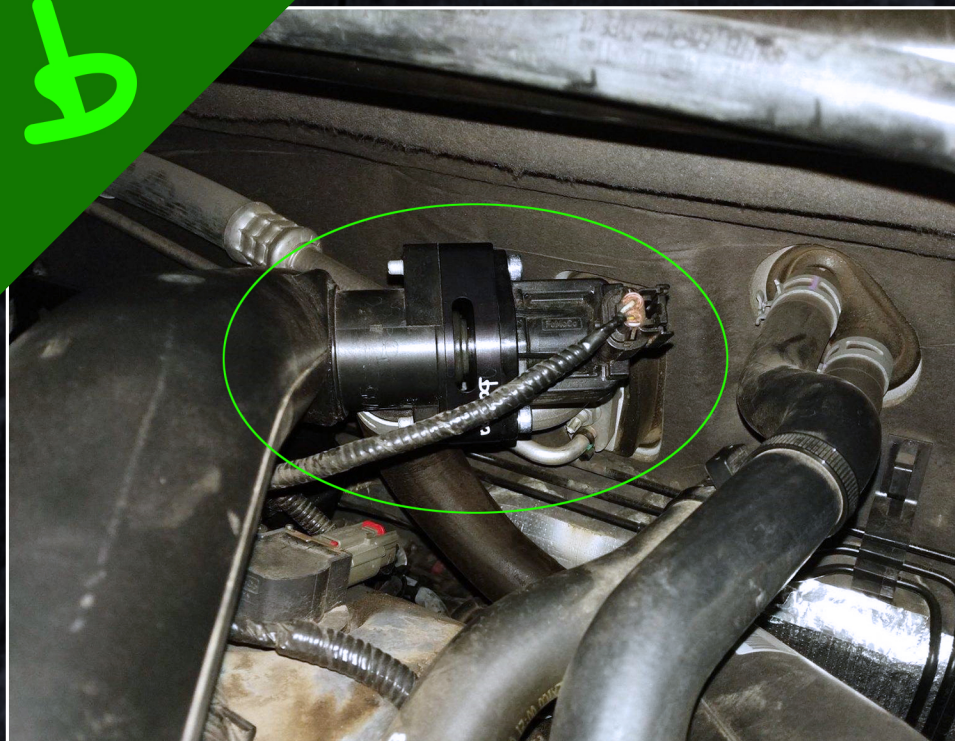

boombaracing '10-'19 Ford Taurus SHO *BLOW OFF VALVE ADAPTERS* INSTALLATION GUIDE

TOOLS REQUIRED:

8mm Socket Wrench
6mm Allen Wrench

DIFFICULTY:

1/5

TIME NEEDED:

<10 Mins

1) The OEM bypass valves are located on the charge pipes near the firewall (top pic) & radiator (bottom pic). Begin with either one.

2) Disconnect the bypass valve wire harness.

3) Unbolt & remove the OEM bypass valve.

4) Insert the **BOOMBA RACING BOV ADAPTER** into the charge pipe. Secure it in place using the OEM bolts into the RECESSED holes.

5) Install the OEM bypass valve onto the **BOOMBA RACING BOV ADAPTER** & secure it using the provided socket head cap screws.

6) Reconnect the wire harness to the bypass valve.

7) REPEAT steps 2-6 for the opposite bypass valve.

