

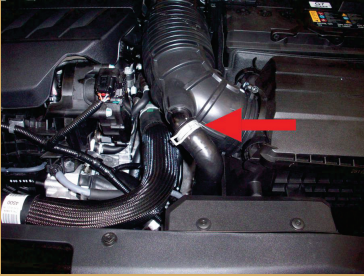


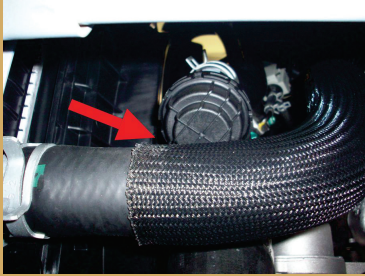
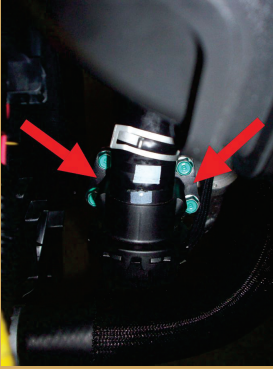


VELOSTER N BOV INSTALLATION

TOOLS REQUIRED

Pliers
Flat screw driver
M10 socket wrench
M8 box wrench

MATERIALS REQUIRED

None

1	Remove the BOV return hose.	2	Plug the return port with provided plug.
			
5	Remove the factory valve and the return hose.	6	Prepare Boomba Racing blow off valve.
		7	Connect the vacuum hose. Secure the Blow Off Valve to the charge pipe with the factory bolts.
			8
			Reinstall the undertray.
			