
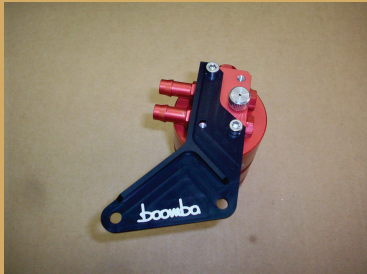

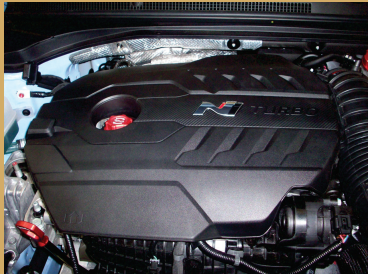
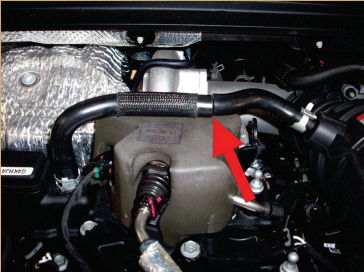
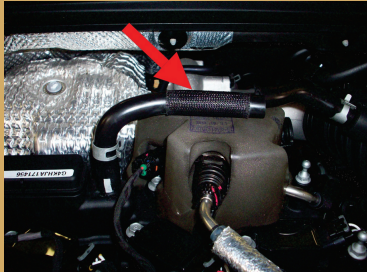
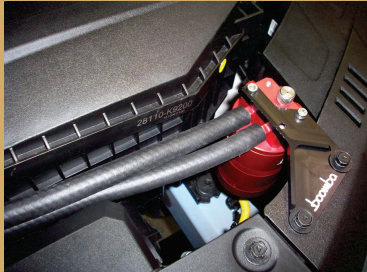



VELOSTER N CATCH CAN S1

TOOLS REQUIRED

M10 socket wrench
4 MM allen wrench
Razor blade

MATERIALS REQUIRED

1	Prepare Veloster N Stage 1 mounting kit.	2	Secure the mounting bracket to the Catch Can	3	Mount the Catch Can beside the front driver side headlight using the existing bolts.	4	Remove the engine cover.
							
5	Cut the factory vent line.	6	Rotate the vent line connected to the valve cover around 45 degrees clockwise.	7	Connect the shorter vent hose to the "IN" port. Connect the longer vent hose to the "OUT" port.	8	Install the hose adaptors.
							
9	Connect the vent from the valve cover to the "IN" port. Connect the vent from the intake to the "OUT" port.	10	Use the zip ties to dress up the vent hoses.	11	Install the engine cover.		
