


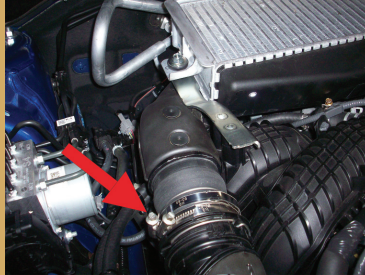
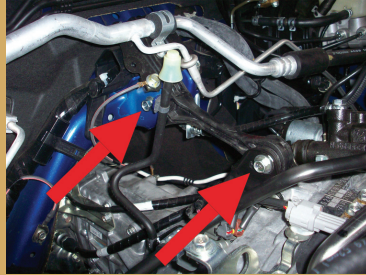

SUBARU WRX/STI

PITCH STOP

TOOLS REQUIRED

12mm Socket
14mm Socket
Flat screw driver

MATERIALS REQUIRED

1	Remove bolts and intercooler brackets.	2	Disconnect charge pipe going to intercooler and remove intercooler.	3	Remove the OEM pitch stop.	4	Prepare Boomba Racing Pitch Stop.
							
5	Install Boomba Racing Pitch Stop.	6	Reinstall intercooler.				
